





- Squarely cut the hose length required, clean the I.D. of the hose, and remove loose wires etc. from cut ends. Then using the reusable shell, mark the insertion depth required on the O.D. of the hose using the paint marker or marking tool.

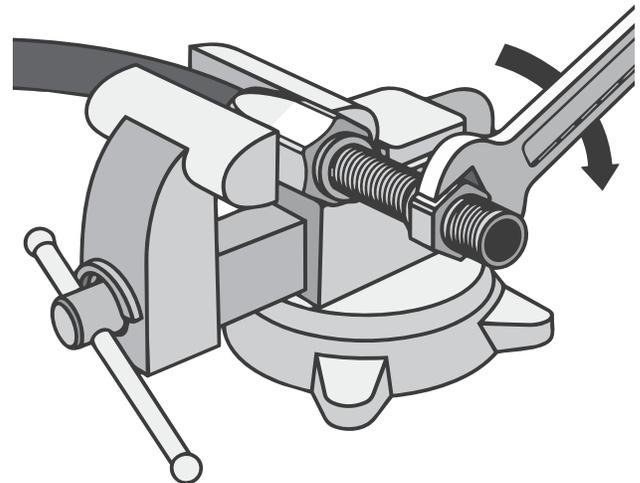

- Place the reusable shell into a vise and install the hose into the shell by pressing the hose in and turning the hose COUNTER-CLOCKWISE until the hose is fully inserted into the shell.
- Lubricate the insert from the stem end to the hex covering all of the threads on the stem with a coat of lubricating oil. Then install the stem into the shell and hose by turning CLOCKWISE until the shell has a 1/16" to 1/8" gap from contacting the stem hex.

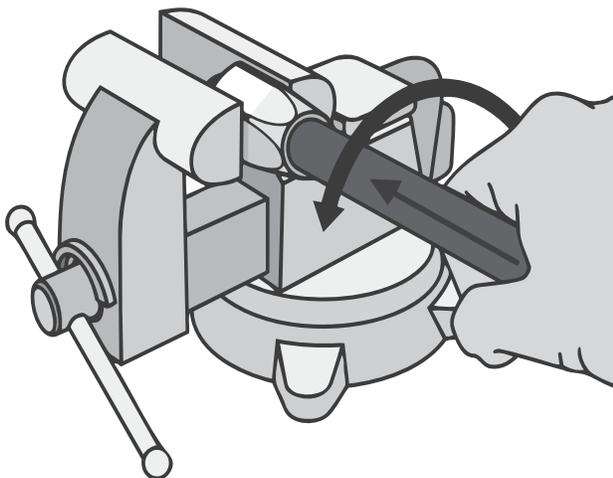

- Inspect the hose assembly and clean off any excess lubrication on the outside. View the hose internally for cut(s), bulge(s), or any other obstructions before putting into service. Make sure swivel nuts turn freely, and the hose lay-line is not twisted between ends. Cap assembly to maintain cleanliness until in use.

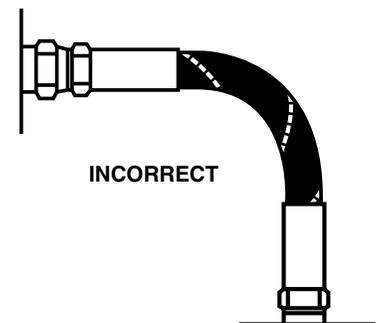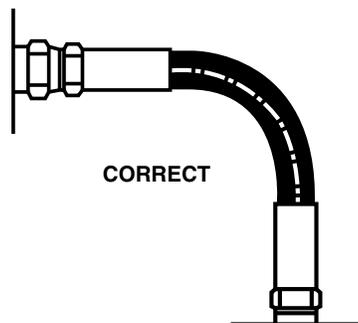

**Find this and other instructions/manuals/tips on our website <https://www.kurthydraulics.com/support/>.
As always you can contact technical support with any questions at 308-787-0127.**